

illimani

TOUCH TAP USER GUIDE

POWER ICON

Rest your finger on the illimani logo for 5 seconds to power the faucet on and off.

PADLOCK ICON

Press before touching the hot water dispense icon to allow the hot water to flow.

DISPENSE CHILLED WATER

If you hold your finger on the Chilled icon, it will dispense for as long as the button is pressed.

TOUCH BLUE ICON ONCE

Chilled water will dispense continuously for 60 seconds or until you touch the icon again.



DYNAMIC DISPLAY

LED display shows current temperature of the water dispensed.

DISPENSE HOT WATER

Press padlock then red icon.

If you hold your finger on the Hot icon, it will dispense for as long as the icon is pressed.

TOUCH RED ICON ONCE

Hot water will dispense continuously for 60 seconds or until you touch the icon again.

DISPENSE ROOM TEMPERATURE WATER

If you touch the Ambient icon, it will dispense for as long as the icon is touched.

TOUCH AMBIENT ICON ONCE

Ambient water will dispense continuously for 60 seconds or until you touch the icon again.

Need help?

www.electricaldealsdirect.co.uk

01934 253600