

F1T & F2ST

Filter Installation guide

1 Connection should be made to mains cold water inlet

Mains cold inlet



2 Connect the 1/4" PF X 1/2" BSP connector to your mains cold inlet pipe using a suitable fitting (not provided)



Contents



1/4" tubing



1/4" PF x 1/2" BSP Connector




Filter cartridge (inc. housing)




Filter housing fixings


3 Remove filter from housing and secure the bracket to the wall using the fixings supplied.

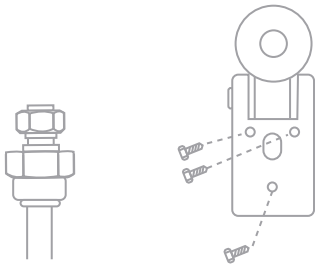

4 Push the filter cartridge up into the housing and turn towards the "close" position.

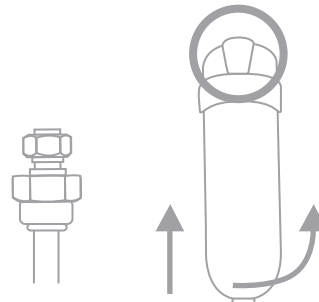

5 Cut the 1/4" tubing supplied to the required length and connect the valve to the filter and the filter to the unit or tap to be supplied.

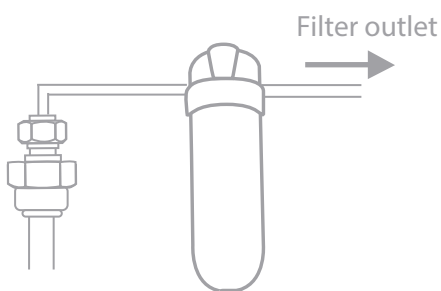

6 Turn on the water supply and check all connections for leaks.

F1T & F2 ST

Filter Installation overview

